

lanex	SAFETY TRIPOD TEMPORARY ANCHOR DEVICE	INSTRUCTION MANUAL						
EN 795/B TS 16415/B	number: TM 13 Ref. XPSTM13	READ CAREFULLY BEFORE USE THE EQUIPMENT						
SECTION 1 - GENERAL DATA Aluminium tripod TM 13 is a component of personal protective equipment against fall from height. Tripod has to be used in conjuction with fall arrest equipment. Tripod TM 13 is designed to use with RUP 502-A and RUP 503 and CRW 300 rescue lifting devices. It is recommended that TM 13 tripod should be transported and installed by minimum two people. Tripod TM 13 provides protection for max. two people in any case.								
 BASIC EQUIPMENT head - made of zinc-plated painted steel. Pins over each wheel prevent working rope against accidental falling from wheel. legs - made of reinforced aluminium profiles with rounded edges. They consist two sections. The telescopic construction of the legs allows the user to adjust their length. To adjust the leg's length locking pin are used. The legs of the tripod are equipped with self-aligning steel feet with rubber pads. The feet have anti-slip "teeth" used when positioning the tripod on a slippery (e.g. icy) surface. two "A" legs - equipped with built-in wheel (for working rope guidance) and attachment point (locking hole) for RUP 502-A and RUP 503 and CRW 300 rescue lifting devices. one "B" leg - without wheel and attachment point. steps - if the legs are maximally extended, additional steps to allow easy and safe installation of the rope on the tripod's head can be used. Up to 3 steps can be used for one tripod. chain - leg chain is supplied to minimaze horizontal forces and prevent the legs spreading and collapsing. 								
Built-in wheel for working rope guidance		eg "A" ttachment Point						
	Leg "B"	Leg "A"						
		eeeelah)						



- legs fully extended: 219 cm
- legs fully retracted: 135 cm
- Diameter over which tripod can be deployed:
 - legs fully extended: 256 cm
 - legs fully retracted: 158 cm
- Weight: 37 kg
- shipping dimensions: 200 x 33 x 31 cm (wooden box)
- protection for maximum two people at the same time,
- available 5 attachment points.

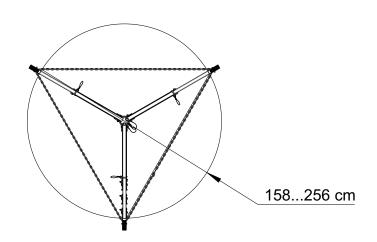

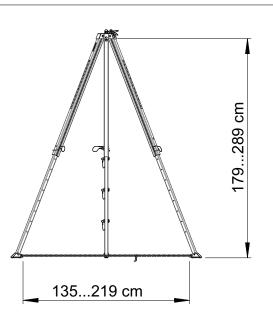

CERTIFICATION AND COMPLIANCE WITH STANDARDS

a) <u>EN 795:2012 type B</u>

Equipment use as a transportable temporary anchor point for one person. EC certificate.

b) <u>TS 16415:2013 type B</u>

Equipment use as a transportable temporary anchor point for two people. Compliance with standard and document TS 16415/B:2013. Not covered by the EC certificate.

c) EN 1496:2006 type B


Equipment use with RUP502-A / RUP503 / CRW300 as an rescue kit for maximum two people. Compliance with standard and document EN 1496/B:2006. Not covered by the EC certificate.



Month and year of the manufacturer's next inspection. Don't use the device after this date. Attention: Before the first use mark the date of inspection (date of first use + 12 months, e.g. first use 01.2013 - mark inspection 01.2014). "Next inspection label" placed near Identity Label.

CONTENT OF THE IDENTITY LABEL

- a) Device type.
- b) Model symbol.
- c) Reference number.
- d) Number/year/class of the European standard.
- e) CE marking and number of a notified body controlling
- manufacturing of the equipment.
- f) Month and year of manufacture.
- g) Serial number of the tripod.
- h) Caution: read the manual.
- i) Marking of the manufacturer or distributor of the tripod.
- j) Maximum number of users permitted simultaneously.

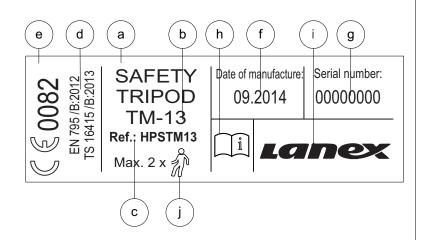


The Notified Body involved with EC type examination and in the production control phase: APAVE SUDEUROPE SAS, CS 60193, 13322 Marseille, France.

IT IS RECOMMENDED THAT THE DEVICE SHOULD BE

TRANSPORTED AND INSTALLED BY MINIMUM TWO PEOPLE.


INSTALLING A TRIPOD

- 1. Place the tripod on a flat, stable and hard surface. Pull out the tripod legs to the desired length and lock with the locking pin.
- 2. Set the tripod in an upright position and fully spread the legs.
- 3. Make sure the feet are on firm ground and can support the load. 4. Adjust the length of the legs so that the head is located in the
- horizontal plane. 5. The tripod should be positioned over opening so working line will
- be located approximately in the center of the opening. 6. Make sure that locking pins are properly secured the end of the locking pin mus protrude above the surface of the tripod legs.
- 7. Secure the tripod legs with the chain against the accidental sliding open. The ends of the chain must be fastened with a snap hook. The chain should be tight between the legs of the tripod. Remove/ excess slack of the chain.

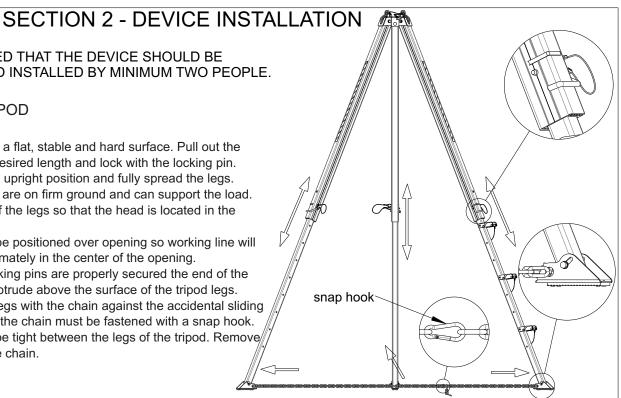

INSTALLING STEPS

- During the installation of the cable on the head of the deployed tripod head it is possible to step onto the tripod leg using the steps. The are installed on the outside of the legs in the holes used for adjusting the height of the tripod.
- · Steps should be installed at regular distances between them.

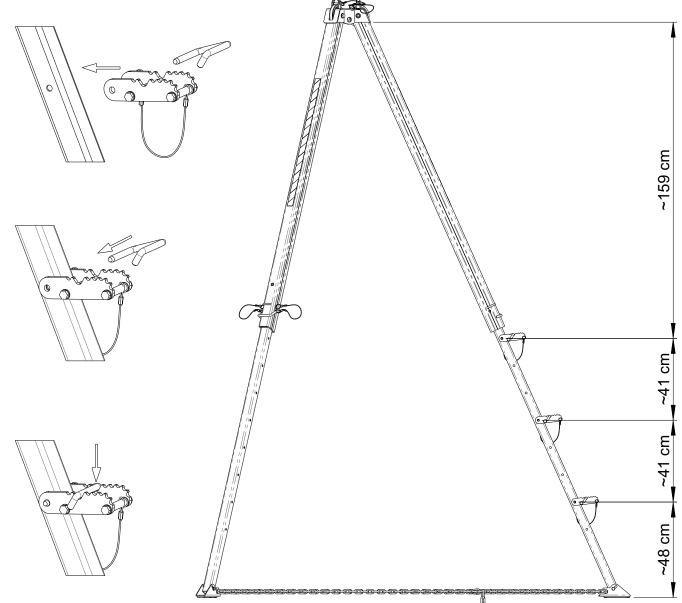


SECTION 3 PERSONAL PROTECTION ACCORDING TO EN 795/B AND TS 16415/B

TM 13 safety tripod can be used as a temporary anchorage according to EN 795/B and TS 16415/B. TM 13 provides protection for maximum two people at the same time.

TM 13 is equipped with five attachment points used for personal protection:

- (1) side attachment point (3 pcs.)
- (2) leg "A" attachment point (2 pcs.)

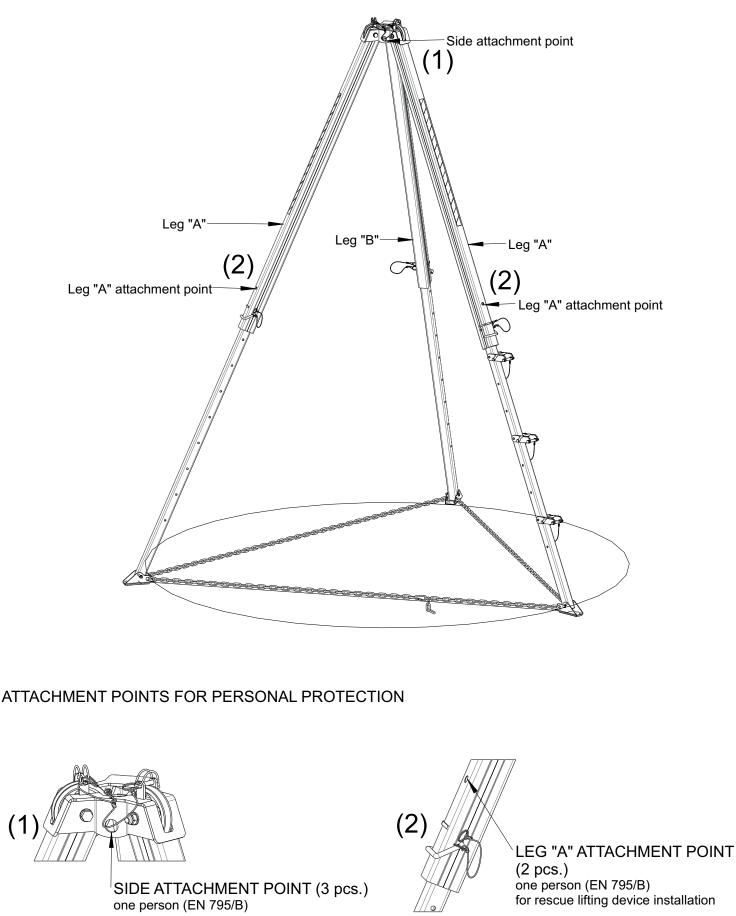

GENERAL PRECAUTIONS

- While working PAY ATTENTION to the chain which fastens the tripod legs, as it can cause accidental tripping of the worker.
- TM 13 MUST NEVER BE USED without chain. Legs MUST ALWAYS BE fastened with chain.
- AVOID working where the user may swing and hit an object or where lines may cross or tangle with that of another worker in the area.
- Fall arrest and rescue systems used with this device MUST MEET applicable EN standards requirements (EN 795 for anchor devices; EN 362 for connectors; EN 361 for full body harnesses; EN 360 for retractable type fall arresters; EN 1496 for rescue lifting devices; EN 1497 for rescue harnesses; EN 341 for descender devices).
- The Maximum Arrest Force (MAF) to which a user of a Fall Arrest System (FAS), who wears a full body harness, is exposed during an arrest of his/her fall is limited by law 6 kN in EU. The system used to protect user against fall from height must include fall protection equipment reducing the Maximum Arrest Force, acting on the user while arresting the fall, to maximum value of 6kN (e.g. fall safety energy absorber with lanyard or retractable fall arrester).
- Make sure that device is installed in a upright position on a flat, stable and hard surface. The surface must support the load.
- DO NOT use TM 13 safety device for more than two people at the same time.
- It is recommended that the device should be transported and installed by minimum two people.
- The anchor device or anchor point for the fall arrest system should always be positioned, and the work carried out in such a way, as to minimize both the potential for falls and potential fall distance. The anchor device/point should be placed above the position of the user. The shape and construction of the anchor device/point shall not allowed to sel-acting disconnection of the equipment. Minimal static strength of the anchor device/point is 13 kN. It is recommended to use certified and marked structural anchor point complied with EN 795.

THE ESSENTIAL PRINCIPLES OF USE OF PERSONAL PROTECTIVE EQUIPMENT

- Personal Protective Equipment (PPE) shall only be used by a person trained and competent in its safe use.
- PPE must not be used by a person with medical condition that could affect the safety of the equipment user in normal and emergency use.
- A rescue plan shall be in place to deal with any emergencies that could arise during the work.
- It is forbidden to make any alterations or additions to the equipment without the manufacturer's prior written consent.
- Any repair shall only be carried out by equipment manufacturer or his certified representative.
- PPE shall not be used outside its limitations, or for any purpose other than that for which it is intended.
- PPE should be a personal issue item.
- Before use ensure about the compatibility of items equipment assembled into fall arrest system. Periodically check connecting and adjusting of the equipment components to avoid accidental loosening or disconnecting of the components.
- It is forbidden to use combinations of items of equipment in which the safe function of any one item is affected by or interferes with the safe function of another.
- It is essential for the safety of the user that if the product is re-sold outside the original country of destination the reseller shall provide instruction for use, for maintenance, for periodic examination and for repair in language of the country in which the product is to be sold.
- A full body harness (conforming EN 361) is the only acceptable body holding device that can be used in a fall arrest system.
- On full body harness use only attaching points marked with big letter "A" to attach a fall arrest system.
- It is obligatory to verify the free space required beneath the user at the workplace before each occasion of use the fall arrest system, so that, in the case of a fall, there will be no collision with the ground or other obstacle in the fall path. The required value of the free space should be taken from instruction manual of used equipment.
- There are many hazards that may affect the performance of the equipment and corresponding safety precautions that have to be observed during equipment utilization, especially:
 - trailing or looping of lanyards or lifelines over sharp edges,
 - any defects like cutting, abrasion, corrosion,
 - climatic exposure,
 - pendulum falls,
 - extremes of temperature,
 - · chemical reagents,
 - · electrical conductivity.

MAXIMUM LOAD TRANSMITTED FROM THE TM 13 TO THE STRUCTURE / LOADING DIRECTION

Surface, where the TM 13 safety tripod was placed on must support the max. device load of 13 kN. Loading direction: perpendicular to the surface on which the TM 13 safety tripod is placed.

INSPECTION

Before each use of personal protective equipment it is obligatory to carry out a pre-use check of the equipment, to ensure that it is in a serviceable condition and operates correctly before it is used.

During pre-use check it is necessary to inspect all elements of the equipment in respect of any damages, excessive wear, corrosion, abrasion, cutting or incorrect acting, especially take into consideration:

- in full body harnesses and belts buckles, adjusting elements, attaching points, webbings, seams, loops;
- in energy absorbers attaching loops, webbing, seams, casing, connectors;
- in textile lanyards or lifelines or guidelines rope, loops, thimbles, connectors, adjusting elements, splices;
- in steel lanyards or lifelines or guidelines cable, wires, clips, ferrules, loops, thimbles, connectors, adjusting elements;
- in retractable fall arresters cable or webbing, retractor and brake proper acting, casing, energy absorber, connector;
- in guided type fall arresters body of the fall arrester, sliding function, locking gear acting, rivets and screws, connector, energy absorber;
- in connectors main body, rivets, gate, locking gear acting;
- in tripods legs, safety pins, eye bolts, feet, chain, connecting elements.

PERIODIC INSPECTION

After every 12 months of utilization, personal protective equipment must be withdrawn from use to carry out periodical detailed inspection. The periodic inspection must be carried out by a competent person for periodic inspection. The periodic inspection can be carried out also by the manufacturer or his authorized representative. In case of some types of the complex equipment e.g. some types of retractable fall arresters the annual inspection can be carried out only by the manufacturer or his authorized representative.

During this inspection will be established admissible time of the device use till next manufacturer's inspection.

The result of the inspection must be recorded in Identity Card.

Regular periodic inspections are the essential for equipment maintenance and the safety of the users which depends upon the continued efficiency and durability of the equipment.

During periodic inspection it is necessary to check the legibility of the equipment marking.

ADMISSIBLE TIME OF USE

The tripod can be used for 5 years counting from a date of putting the tripod into operation. After this period the tripod must be withdrawn from use to carry out manufacturer's detailed inspection.

The manufacturer's inspection can be carried out by:

- manufacturer
- person recommended by manufacturer
- company recommended by manufacturer.

During this inspection will be established admissible time of tripod use till next manufacturer's inspection and recorded in Identity Card.

WITHDRAWAL FROM USE

Personal protective equipment must be withdrawn from use immediately when any doubt arise about its condition for safe use and not used again until confirmed in writing by equipment manufacturer or his representative after carried out the detailed inspection.

WITHDRAWN FROM USE AFTER ARRESTING A FALL

TM 13 safety tripod must be withdrawn from use immediately when it have been used to arrest a fall. After that must be carried out detailed manufacturer's inspection of the tripod.

The manufacturer's inspection can be carried out by:

- manufacturer
- person recommended by manufacturer
- company recommended by manufacturer.

During this inspection will be established if the tripod can be longer used and will be define the admissible time of tripod use till next manufacturer's inspection and recorded in Identity Card.

TRANSPORTATION

Personal protective equipment must be transported in the package (e.g.: bag made of moisture-proof textile or foil bag or cases made of steel or plastic) to protect in against damage or moisture.

MAINTENANCE AND STORAGE

The equipment can be cleaned without causing adverse effect on the materials in the manufacture of the equipment. For textile products use mild detergents for delicate fabrics, wash by hand or in a machine and rinse in water. Plastic parts can be cleaned only with water. When the equipment becomes wet, either from being in use or when due cleaning, it shall be allowed to dry naturally, and shall be kept away from direct heat. In metallic products some mechanic parts (spring, pin, hinge, tec.) can be regularly slightly lubricated to ensure better operation. Other maintenance and cleaning procedures should be adhered to detailed instructions stated in the manual of the equipment.

Personal protective equipment should be stored loosely packed, in a well-ventilated place, protected from direct light, ultraviolet degradation, damp environment, sharp edges, extreme temperatures and corrosive or aggressive substances.


SECTION 4- RESCUE ACCORDING TO EN 1496/B

GENERAL PRECAUTIONS FOR RESCUE:

- Secondary fall arrest system (conforming EN 363) must be used when working with the TM 12 and RUP 502-A / RUP 503.
 Fall arrest and rescue systems used with this device MUST MEET applicable EN standards requirements (EN 795 for anchor devices; EN 362 for connectors; EN 361 for full body harnesses; EN 360 for retractable type fall arresters; EN •
- 1496 for rescue lifting devices; EN 1497 for rescue harnesses; EN 341 for descender devices).
 For rescue purposes with RUP 502-A or RUP 503 rescue lifting devices always use SDW energy absorber (component of RUP 502-A and RUP 503 lifting devices).
- During installing rescue lifting devices RUP 502-A, RUP 503 or CRW 300 (with AT 172 fixing adapter) locking pin MUST BE embedded in locking hole. Only then rescue lifting device can be safely and firmly installed on the reinforced hexapod leg.

USAGE TM 13 SAFETY TRIPOD FOR RESCUE PURPOSES

TM 13 safety tripod cn be used for rescue purposes in conjuction with RUP 502-A / RUP 503 / CRW 300 rescue lifting devices.

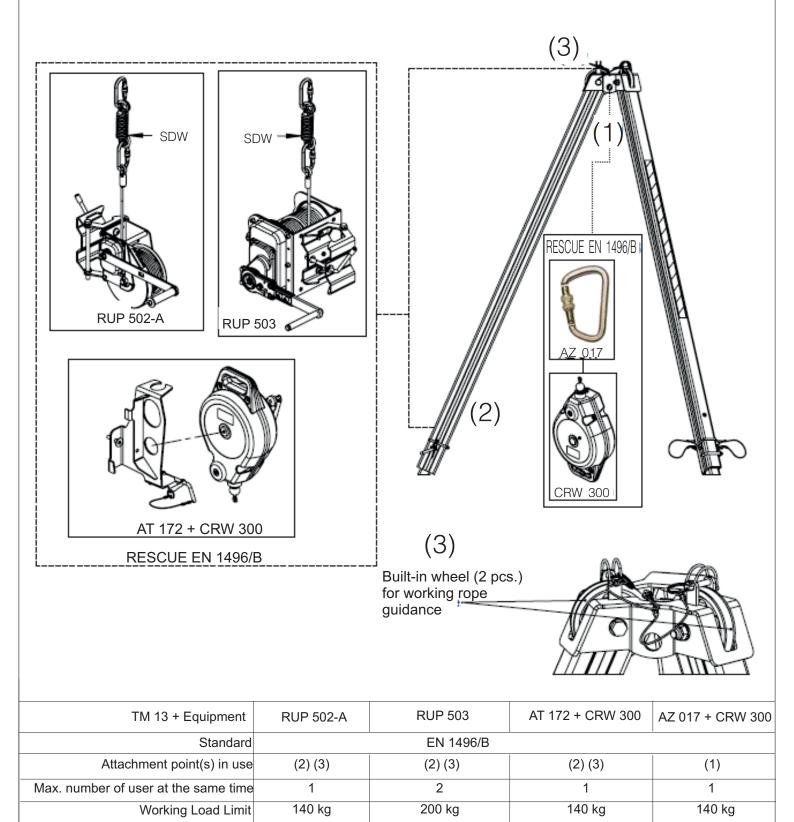

INSTALLING THE CABLE

- Remove the pins installed over the built-in wheel.
- Put the working rope of the hosting device on the built-in wheel. Put the end of the rope through the opening in the head.
- Put the pins in hole and secure them with the cotter.
- Check that the cable is correctly placed on the head build-in wheel.

INSTALLING RESCUE LIFTING DEVICES

The tripod can be used with RUP 502-A and RUP 503 and CRW 300 lifting devices. RUP502-A / 503 and CRW 300 should be installed on the tripod "A" legs. The grip of the RUP 502-A / 503 and fixing adapter AT 172 of CRW 300 should be fastened on the locking hole situated on the outer wall of the leg "A" profile. Working rope should pass through the head built-in wheel andm head top hole. For proper and safe installation and use of the RUP502-A and RUP 503 and CRW 300 follow their manuals.

6)


Ø

pin

Cable

D

 \mathbb{O}

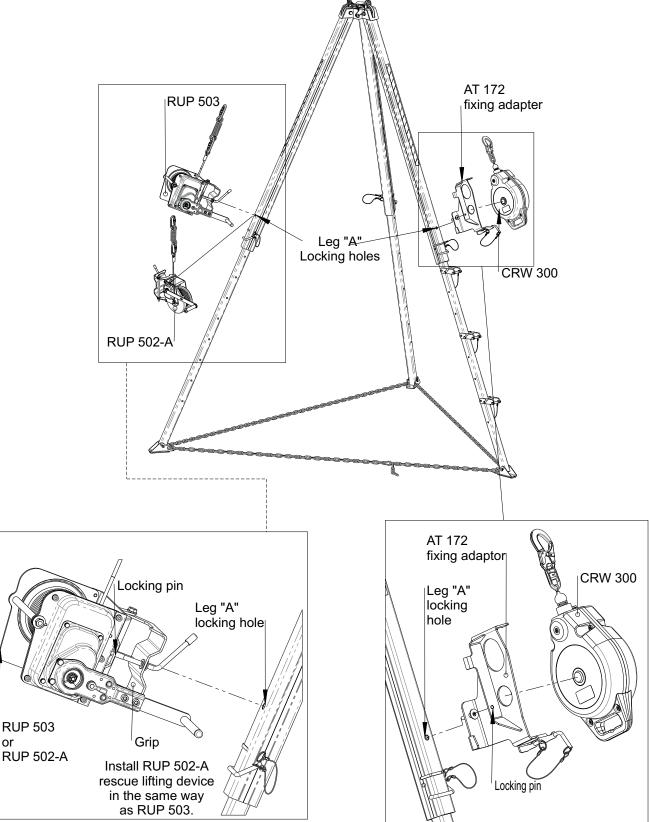

N	NOTES								
IDENTITY CARD									
	IT IS RESPONSIBILITY OF THE USER ORGANISATION TO PROVIDE THE IDENTITY CARD AND TO FILL IN THE DETAILS REQUIRED. THE IDENTITY CARD SHOULD BE FILLED IN ONLY BY COMPETENT PERSON RESPONSIBLE FOR PROTECTIVE EQUIPMENT. THE IDENTITY CARD SHOULD BE								
FILLED IN BEFORE THE FIRST USE OF THE EQUIPMENT. ANY INFORMATION ABOUT THE EQUIPMENT LIKE: PERIODIC INSPECTIONS, REPAIRS, REASONS OF EQUIPMENT'S WITHDRAWN FROM USE SHALL BE NOTED. THE IDENTITY CARD SHOULD BE STORAGED DURING A WHOLE PERIOD									
	MODEL AND TYPE OF EQUIPMENT								
R	REF. NUN	/BER							
SERIAL NUMBER									
DATE OF MANUFACTURE									
DATE OF PURCHASE									
DATE OF FIRST USE									
USER NAME									
	PERIODIC EXAMINATION AND REPAIR HISTORY								
	DATE	REASON FOR SERVICING / REPAIR	REPAIRS CARRIED OUT		NAME AND SIGNATURE OF COMPETENT PERSON	DATE OF NEXT EXAMINATION			
1									

	DATE	REASON FOR SERVICING / REPAIR	REPAIRS CARRIED OUT	NAME AND SIGNATURE OF COMPETENT PERSON	DATE OF NEXT EXAMINATION
1					
2					
3					
4					
5					
6					
7					
8					
9					

LANEX a. s. - Hlučínská 1 / 96, 747 23 Bolatice; Tel: + 420 553 751 111, Fax: + 420 553 654 125, E-mail: lanex@lanex.cz, www.lanex.cz